



## **CARE & MAINTENANCE**

### **Before Writing on Dry Erase Surface**

Before initial use of the writing surface, the material must be cleaned with Expo Cleaner and a soft cloth, then towel dried. Follow with clean water and a soft cloth. Towel dry. This will remove manufacturing residue and static electricity, optimizing the erasing qualities of Speak easy.

### **Markers**

We recommend the use of Expo Bold Color markers. Other dry erase markers can also be used, but should be tested for acceptability before use across the entire writing surface.

### **Daily Cleaning**

Quartet GhostDuster erasers or Easy-Clean Cloths are recommended for removing the dry erase markings. Change the eraser surface often, as they become soiled to avoid leaving excessive marker residue on the surface. For cleaning marker residue build-up, use Expo brand dry erase cleaning solution and a soft towel.

### **Projection and Speak easy Colors**

Projection and Colors have a low-glare dry erase surface that requires more frequent cleaning than Standard (high-gloss) material. Easy-Clean cloths work well when erasing low-glare surfaces. While no dry erase markings will be permanent on the low-glare surface, it may be necessary to use Expo Cleaner to bring these products back to “like new” condition.

### **Long Term Care**

We strongly suggest that entire surface be cleaned on a regular basis to insure the ultimate performance and appearance of the product over the long term.

### **Warning**

Do not use abrasive cleaners/cleaning tools, hard-edged erasers or sharp pointed writing instruments on the dry erase surface.

Speak easy Start-Write Kits contain all recommended writing and cleaning products. Contact your Representative for details.